

# SHARP

**1** BIT  
TECHNOLOGY

## 1-BIT DIGITAL AUDIO SYSTEM


MODEL

# SD-EX220

OPERATION MANUAL

**1bit**  
Technology

COMPACT  
**disc**  
DIGITAL AUDIO

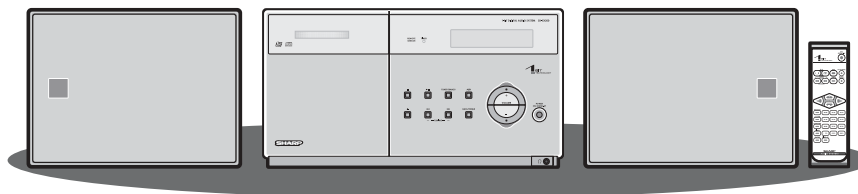

# SPECIAL NOTES



## CAUTION

RISK OF ELECTRIC SHOCK  
DO NOT OPEN



**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK).**

**NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**

### Explanation of Graphical Symbols:



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

**Caution - use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.**

### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### WARNING

FCC Regulations state that any unauthorized changes or modifications to this equipment not expressly approved by the manufacturer could void the user's authority to operate this equipment.

### Note to CATV system installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the National Electrical Code that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

## FOR YOUR RECORDS

For your assistance in reporting this unit in case of loss or theft, please record below the model number and serial number which are located on the rear of the unit.

Please retain this information.

**Model number** .....

**Serial number** .....

**Date of purchase** .....

**Place of purchase** .....

# IMPORTANT SAFETY INSTRUCTIONS


- 1 Read Instructions** - All the safety and operating instructions should be read before the product is operated.
- 2 Retain Instructions** - The safety and operating instructions should be retained for future reference.
- 3 Heed Warnings** - All warnings on the product and in the operating instructions should be adhered to.
- 4 Follow Instructions** - All operating and use instructions should be followed.
- 5 Cleaning** - Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 6 Attachments** - Do not use attachments not recommended by the product manufacturer as they may cause hazards.
- 7 Water and Moisture** - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.
- 8 Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
- 9** A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



- 10 Ventilation** - Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.
- 11 Power Sources** - This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer to the operating instructions.
- 12 Grounding or Polarization** - This product may be equipped with a polarized alternating-current line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.  
**Alternate Warnings** - This product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding-type plug.
- 13 Power-Cord Protection** - Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.
- 14 Protective Attachment Plug** - The product is equipped with an attachment plug having overload protection. This is a safety feature. See Instruction Manual for replacement or resetting of protective device. If replacement of the plug is required, be sure the service technician has used a replacement plug specified by the manufacturer that has the same overload protection as the original plug.

# IMPORTANT SAFETY INSTRUCTIONS (continued)

- 15 Outdoor Antenna Grounding** - If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

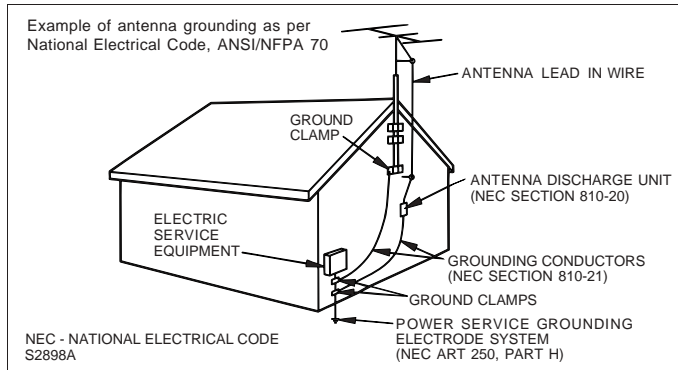

- 16 Lightning** - For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
- 17 Power Lines** - An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.
- 18 Overloading** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

- 19 Object and Liquid Entry** - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.
- 20 Servicing** - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 21 Damage Requiring Service** - Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
- When the power-supply cord or plug is damaged,
  - If liquid has been spilled, or objects have fallen into the product,
  - If the product has been exposed to rain or water,
  - If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation,
  - If the product has been dropped or damaged in any way, and
  - When the product exhibits a distinct change in performance - this indicates a need for service.
- 22 Replacement Parts** - When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.
- 23 Safety Check** - Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.
- 24 Wall or Ceiling Mounting** - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
- 25 Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

## **ENERGY STAR® Program Information**

As an ENERGY STAR® Partner, SHARP has determined that this product meets the ENERGY STAR® guidelines for energy efficiency.

ENERGY STAR® is a U.S. registered mark.

### **WHY PURCHASE ENERGY STAR® LABELED PRODUCTS?**

Many Electrical/Electronic Products use energy both when they are on and when they are off. Americans spend more than \$3 billion a year on energy consumed by home electronic products when they are not in use. The new ENERGY STAR® labeled models will reduce that energy "leakage" by up to 75 percent. Ultimately, this will mean more than \$1 billion a year in energy savings for consumers.

The energy savings will help reduce the burning of fossil fuels and the related carbon dioxide pollution that contributes to global warming. If every American family replaced their electronic equipment with ENERGY STAR® labeled models, it would reduce air pollution equivalent to eliminating more than two million cars.



By using ENERGY STAR® labeled products, you will save money on your electric bills and use less energy.

That makes good economic sense and it's good for our environment.

---

ENERGY STAR® is a U.S. registered mark.

	Page
> <b>General Information</b>	
Introduction .....	6
Accessories .....	6
Precautions .....	7
Controls and indicators .....	8 - 10
> <b>Preparation for Use</b>	
Remote control .....	11
System connections .....	12 - 13
To install the main unit and speakers on the wall .....	14 - 15
General control .....	16
Setting the clock .....	17
> <b>CD Playback</b>	
Listening to a CD .....	18 - 19
Advanced CD Playback .....	19 - 21
> <b>Radio</b>	
Listening to the radio .....	22 - 23
> <b>Advanced Features</b>	
Timer and sleep operation .....	24 - 26
Enhancing your system .....	27 - 28
> <b>References</b>	
Troubleshooting chart .....	28 - 29
Maintenance .....	30
Error messages .....	30
Specifications .....	31
<b>CONSUMER LIMITED WARRANTY .....</b>	<b>Back cover</b>

 
 

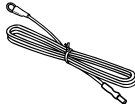 
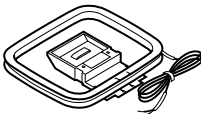 
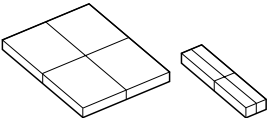 
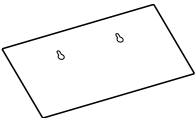 
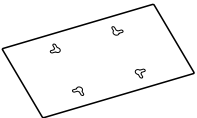 
# Introduction

Thank you for purchasing this SHARP product. To obtain the best performance from this product, please read this manual carefully. It will guide you in operating your SHARP product.

\* SD-EX220 1-Bit Digital Audio System consisting of SD-EX220 (main unit) and CP-EX220 (speaker system).

## Accessories

Please confirm that the following accessories are included.

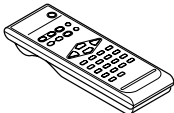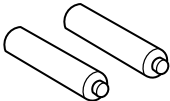
 <p>Remote control × 1 RRMCG0375AWSA</p>	 <p>"AA" size battery (UM/SUM-3, R6, HP-7 or similar) × 2 UBATU0001AWZZ</p>	 <p>Speaker wire × 2 QCNWH0010AWZZ</p>	 <p>FM antenna × 1 QANTW0004AW09</p>
 <p>AM loop antenna × 1 QANTL0015AW09</p>	 <p>Antislip speaker cushion sheet (4 pcs.) × 2 PCUSG0022AWZZ</p>	 <p>Pattern paper for main unit × 1 TCAUH0109AWZZ</p>	 <p>Pattern paper for speaker × 1 TCAUH0110AWZZ</p>

**Note:**


Only the above accessories are included.

## > General


- Please ensure that the equipment is positioned in a well-ventilated area and ensure that there is at least 4" (10 cm) of free space along the sides, top and back of the equipment.  
(Unless the unit is to be wall mounted.)

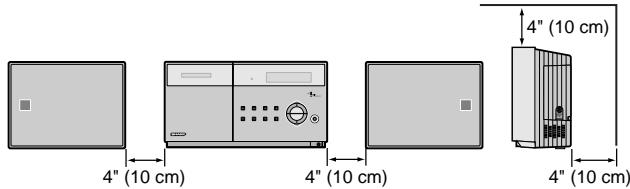


- Use the unit on a firm, level surface free from vibration.

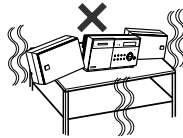

 
- Keep the unit away from direct sunlight, strong magnetic fields, excessive dust, humidity and electronic/electrical equipment (home computers, facsimiles, etc.) which generate electrical noise.

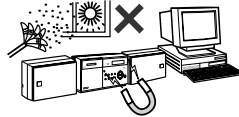

 
- Do not place anything on top of the unit.
- Do not expose the unit to moisture, to temperatures higher than 140°F (60°C) or to extremely low temperatures.
- If your system does not work properly, disconnect the AC power cord from the AC outlet. Plug the AC power cord back in, and then turn on your system.
- In case of an electrical storm, unplug the unit for safety.

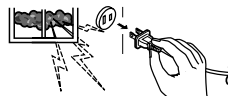

 - Hold the AC power plug by the head when removing it from the AC outlet, as pulling the cord can damage internal wires.

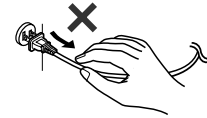

- **Do not remove the outer cover, as this may result in electric shock. Refer internal service to your local SHARP service facility.**

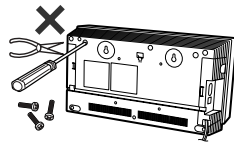

- This unit should only be used within the range of 41°F - 95°F (5°C - 35°C).


## Warning:

- The voltage used must be the same as that specified on this unit. Using this product with a higher voltage other than that which is specified is dangerous and may result in a fire or other type of accident causing damage. SHARP will not be held responsible for any damage resulting from use of this unit with a voltage other than that which is specified.
- **CD players use a laser pickup which can damage the eyes if viewed directly. Do not look at the pickup, and do not touch the pickup directly.**

## > Volume control

The sound level at a given volume setting depends on speaker efficiency, location and various other factors. It is advisable to avoid exposure to high volume levels, which occurs while turning the unit on with the volume control setting up high, or while continually listening at high volumes.

# Controls and indicators

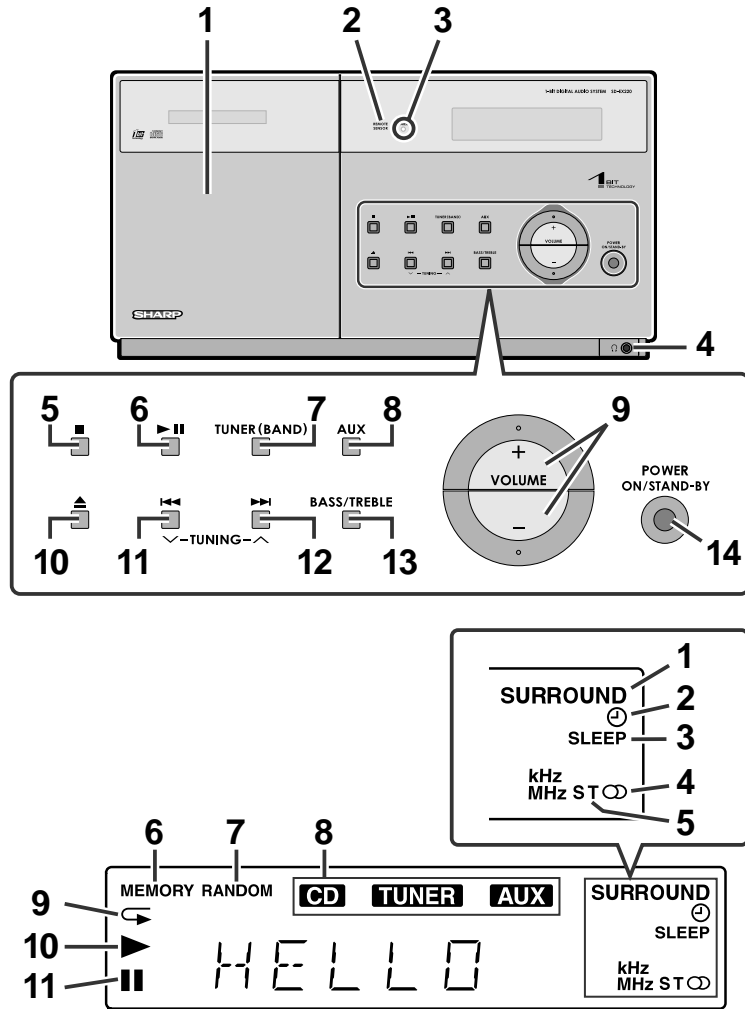



## > Front panel

	Reference page
1. CD Cover	18
2. Remote Sensor	11
3. Timer Set Indicator	25
4. Headphone Jack	27
5. CD Stop Button	18
6. CD Play/Pause Button	18
7. Tuner (Band) Button	22
8. Auxiliary Button	27
9. Volume Up and Down Buttons	16
10. CD Cover Open/Close Button	18, 19
11. CD Track Down or Fast Reverse/Tuning Down Button	19, 22
12. CD Track Up or Fast Forward/Tuning Up Button	19, 22
13. Bass/Treble Button	16
14. Power On/Stand-by Button	16

## > Display

	Reference page
1. Surround Indicator	16
2. Timer Play Indicator	25
3. Sleep Indicator	26
4. FM Stereo Receiving Indicator	23
5. FM Stereo Mode Indicator	23
6. CD Memory Indicator	21
7. Random Play Indicator	20
8. Function Indicators	18, 22, 27
9. CD Repeat Play Indicator	20
10. CD Play Indicator	
11. CD Pause Indicator	



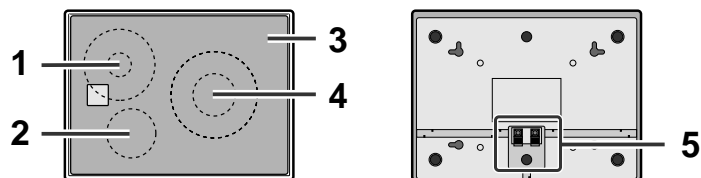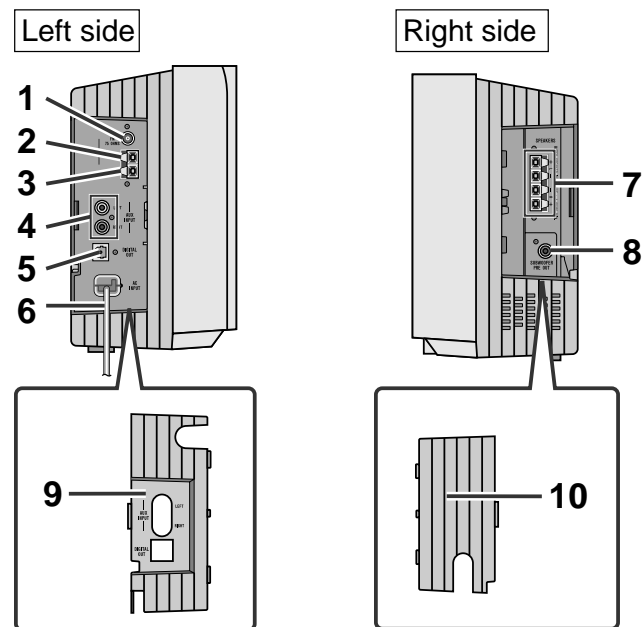

## > Side panel

	Reference page
1. FM 75 Ohms Antenna Jack	12, 13
2. AM Antenna Ground Terminal	12, 13
3. AM Antenna Terminal	12, 13
4. Auxiliary Input Jacks	27
5. Optical Digital Output Jack	27
6. AC Power Cord	13
7. Speaker Terminals	12
8. Subwoofer Pre-output Jack	28
9. Left Side Cover	12, 13
10. Right Side Cover	12, 13

### Note:


For details on opening side covers, see page 12.

## > Speaker system

	Reference page
1. Tweeter	
2. Bass Reflex Duct	
3. Speaker Grille	
4. Woofer	
5. Speaker Terminals	12


### Speaker grilles are removable:

Make sure nothing comes into contact with the speaker diaphragms when you remove the speaker grilles.

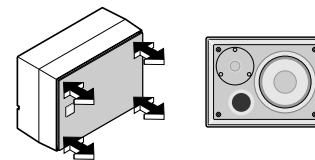


### Note:

 When the speakers are hung on the wall, the speaker badge reads vertically. In this case, you can adjust the badge to point the proper direction by turning it manually.

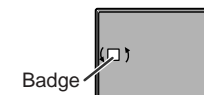

# Controls and indicators (continued)

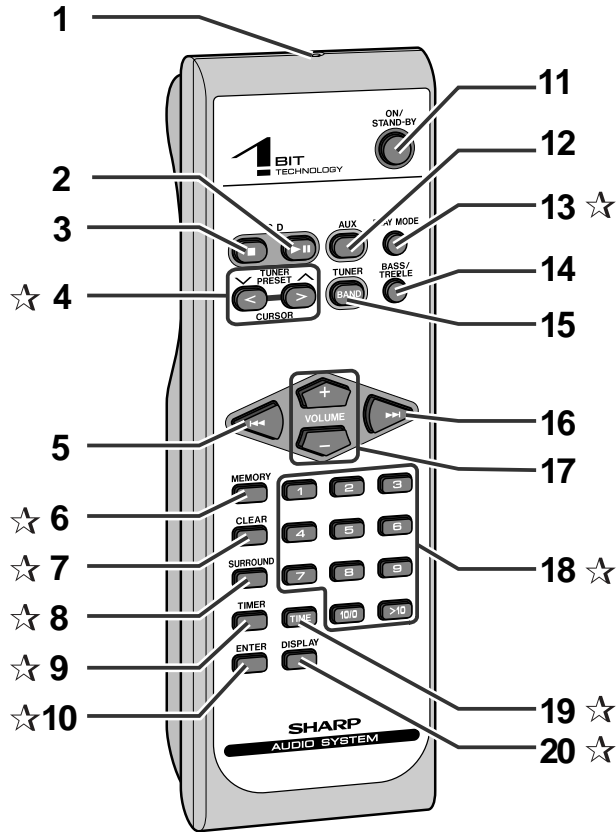


## > Remote control

	Reference page
1. Remote Control Transmitter	.11
2. CD Play/Pause Button	.18
3. CD Stop Button	.18
4. <b>Cursor/Tuner Preset Buttons</b>	<b>.17, 23</b>
5. CD Track Down or Fast Reverse/Tuning Down Button	.19, 22
6. <b>CD Memory Button</b>	<b>.21</b>
7. <b>Program Clear Button</b>	<b>.21</b>
8. <b>Surround Button</b>	<b>.16</b>
9. <b>Timer Button</b>	<b>.17, 24</b>
10. <b>Enter Button</b>	<b>.17, 24</b>
11. Power On/Stand-by Button	.16
12. Auxiliary Button	.27
13. <b>CD Play Mode Select Button</b>	<b>.20</b>
14. Bass/Treble Button	.16
15. Tuner (Band) Button	.22
16. CD Track Up or Fast Forward/Tuning Up Button	.19, 22
17. Volume Up and Down Buttons	.16
18. <b>CD/Tuner Direct Buttons</b>	<b>.20, 23</b>
19. <b>CD Time Display Button</b>	<b>.20</b>
20. <b>Clock Display/Dimmer Button</b>	<b>.16, 17</b>

Buttons with "\*" mark in the illustration or highlighted in bold on the list can be operated on the remote control only.

## > Battery installation

- 1 Remove the battery cover.
- 2 Insert the supplied batteries according to the direction indicated in the battery compartment.  
When inserting or removing the batteries, push them toward the ⊖ battery terminals.
- 3 Replace the cover.

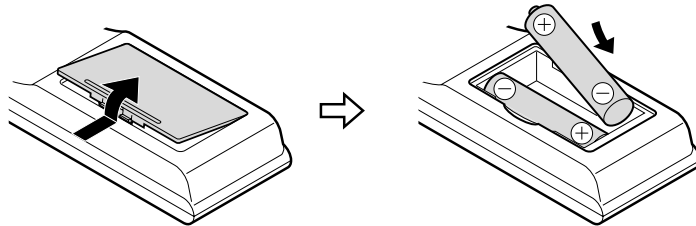

### Precautions for battery use:

- Replace all old batteries with new ones at the same time.
- Do not mix old and new batteries.
- Remove the batteries if the unit will not be used for long periods of time. This will prevent potential damage due to battery leakage.

### Caution:

- Do not use rechargeable batteries (nickel-cadmium battery, etc.).
- Installing the batteries incorrectly may cause the unit to malfunction.

### Notes concerning use:


- Replace the batteries if the operating distance is reduced or if the operation becomes erratic. Purchase 2 "AA" size batteries (UM/SUM-3, R6, HP-7 or similar).
- Periodically clean the transmitter on the remote control and the sensor on the unit with a soft cloth.
- Exposing the sensor on the unit to strong light may interfere with operation. Change the lighting or the direction of the unit.
- Keep the remote control away from moisture, heat, shock, and vibrations.

## > Test of the remote control


Check the remote control after verifying all the connections (see pages 12 - 13). Point the remote control directly at the remote sensor on the unit.

### The remote control can be used within the range shown below:

Press the ON/STAND-BY button. Does the power turn on? Now, you can enjoy the music.

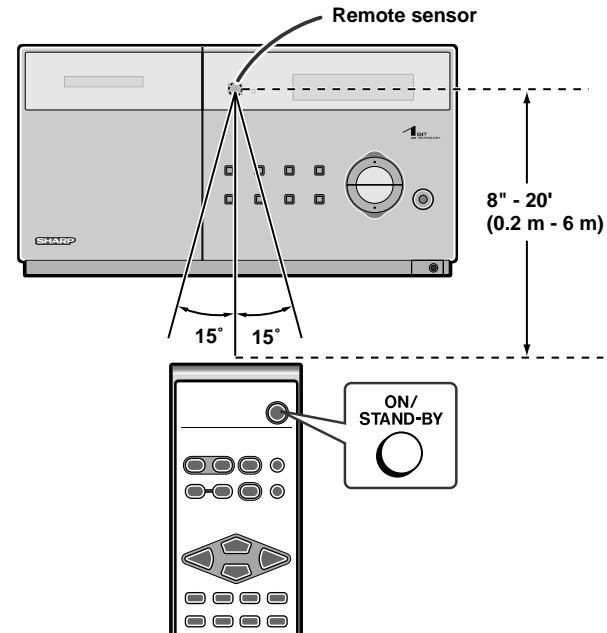


# System connections

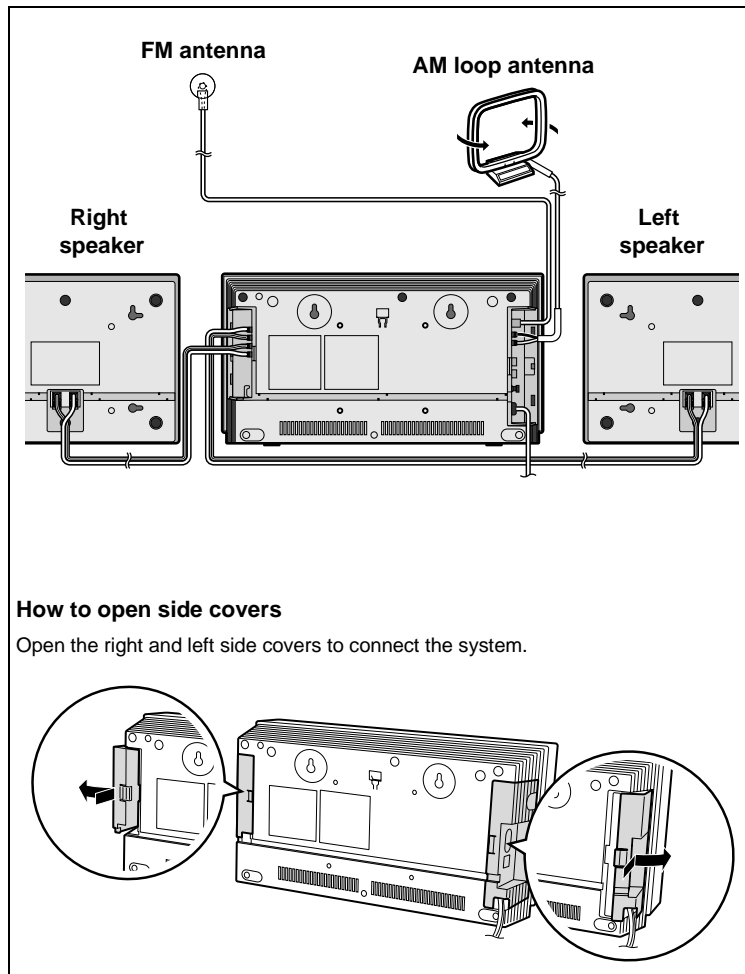

## How to open side covers


Open the right and left side covers to connect the system.

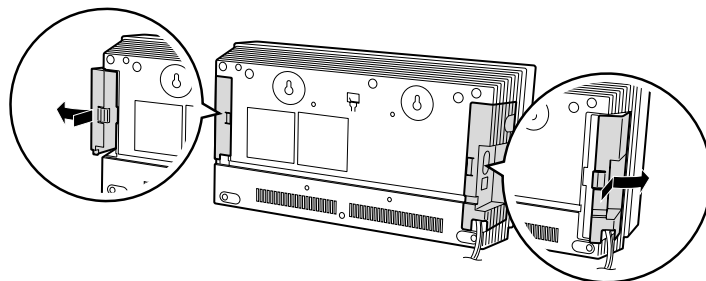

## > Speaker connection

- Make sure to unplug the AC power cord before connecting the speaker wires.
- Connect the speaker wires to the speakers first, then to the unit. This prevents short circuit between  $\oplus$  and  $\ominus$  terminals.

Connect the wire with the gray line to the minus (-) terminal and the white wire to the plus (+) terminal.

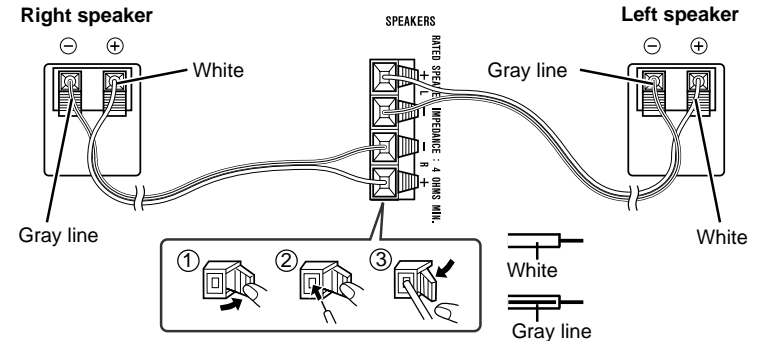

## Caution:

- Use speakers with an impedance of 4 ohms or more, as lower impedance speakers can damage the unit.
- Do not mistake  $\oplus$  and  $\ominus$ , and right and left terminals of the speaker wires. (The right speaker is placed on the right when you face the unit.)
- Do not let the bare speaker wires touch each other.**
- Do not short-circuit the speaker wires. If the power is turned on, malfunction may occur.**
- Do not allow any objects to fall into or to be placed in the bass reflex ducts.
- Do not stand or sit on the speakers. You may be injured.

## Note:

Place speakers with the tweeter on the outside (see diagram).




### Using antislip speaker cushions:


You can install speakers either vertically or horizontally.

Affix the cushions (supplied) to the bottom of the speakers to prevent them from sliding or falling due to vibration.

(Horizontal position)

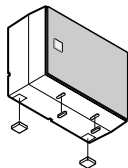

(Vertical position)

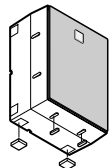 

## > Antenna connection

### Supplied FM antenna:


Connect the FM antenna wire to the FM 75 OHMS jack and position the FM antenna wire in the direction where the strongest signal can be received.

### Supplied AM loop antenna:

Connect the AM loop antenna wire to the AM and GND terminals. Position the AM loop antenna for optimum reception. Place the AM loop antenna on a shelf, etc., or attach it to a stand or a wall with screws (not supplied).


### Note:

Placing the antenna on the unit or near the AC power cord may cause noise pickup. Place the antenna away from the unit for better reception.

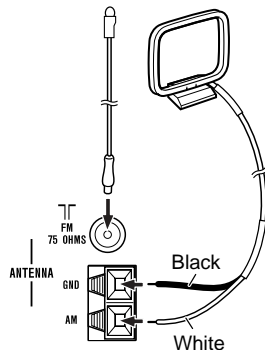


### Installing the AM loop antenna:
 
#### < Assembling >

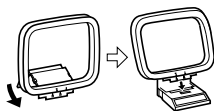


#### < Attaching to the wall >

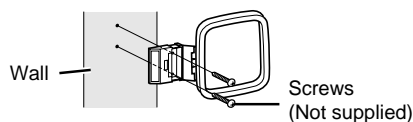

### Outdoor FM or AM antenna:

Use an outdoor FM or AM antenna if you require better reception. Consult your dealer.

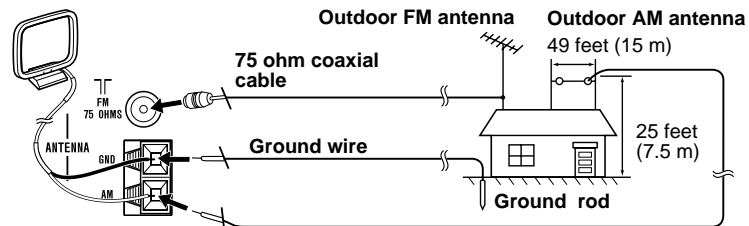


### Note:

When using an outdoor AM antenna, be sure to keep the wire of the AM loop antenna connected.


## > How to close side covers

When completing the connection, close the side covers (be careful not to trap the wires).

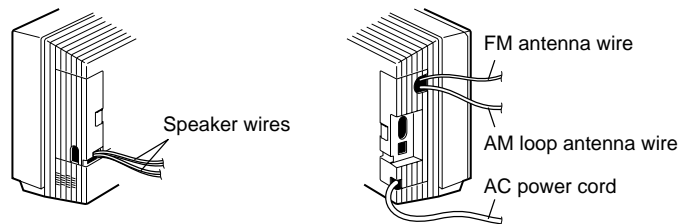

## > Connecting the AC power cord

 After checking all the connections have been made correctly, plug the AC power cord of the unit into the AC outlet.

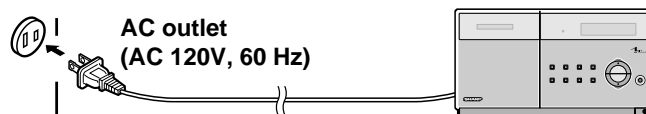

### Note:

Unplug the AC power cord from the AC outlet if the unit will not be in use for a prolonged period of time.


# To install the main unit and speakers on the wall

## CAUTION:

- Be very careful to prevent the main unit [8.2 lbs. (3.7 kg)] from falling when mounting on the wall.
- Before mounting, check the wall strength. (Do not put to the veneer plaster or whitewashed wall. The main unit or speakers may fall.) If it is not clear, consult a qualified service technician.
- Mounting screws are not supplied. Use appropriate ones.
- Check all mounting screws for looseness and that they are engaged in the main unit and speakers.
- Mount the main unit and speakers on the wall with 2 screws for each.
- Select a good location. If not, accidents may occur or the unit may get damaged.
- Avoid placing on a bed, sofa, water tank, sink and hallway wall.
- To avoid accidents, fix the speaker wires to the wall. You may trip over them.
- SHARP is not responsible for accidents resulting from improper installation.


## > Driving screws

Sharp designed the main unit and speakers so you may hang them on the wall. Use proper screws (not supplied). See below for size and type.

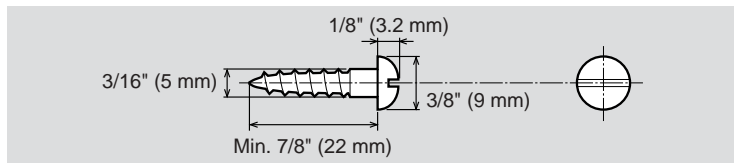


### Drive two screws into the wall for the main unit and each speaker, as shown in the illustration.

- Make sure that both the screw and the wall can support a load of 45 lbs. (20 kg).
- Drive the screws, so the screw head extends about  $7/32$ " (5.5 mm) out from the wall.

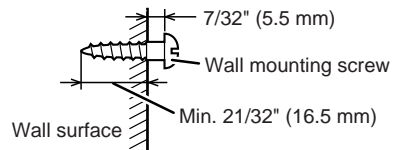


## > Installing the main unit

- Fix the pattern paper and drive two screws into the wall with a distance of  $6-5/16$ " (160 mm) in between.

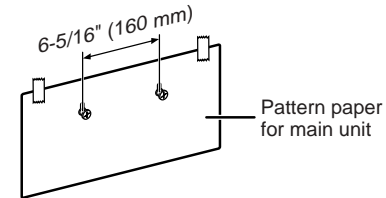

- Tighten the screws and remove the paper. Hook the main unit on the screw heads and make sure it is secure.

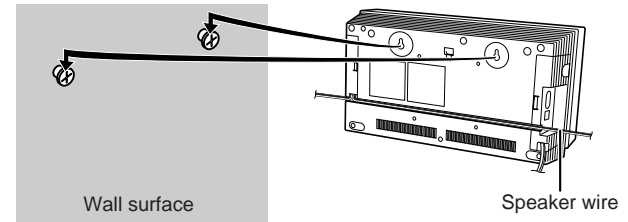


Put the left speaker wire in the groove on the back of the main unit.


## > Installing speakers

- 1** Fix the pattern paper and drive two screws into the wall with a distance of 6-5/16" (160 mm) in between. When mounting vertically, set the distance to 4-5/16" (110 mm).

(Horizontal position)

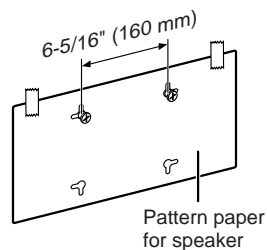


(Vertical position)

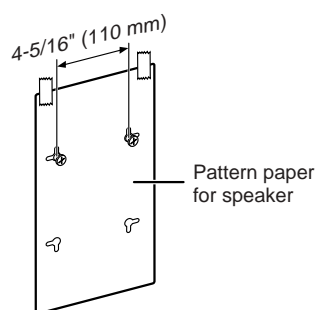


- 2** Tighten the screws and remove the paper. Hook the speaker on the screw heads and make sure it is secure.

(Horizontal position)

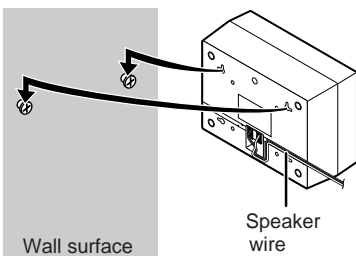

(Vertical position)

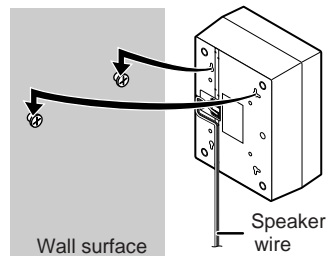

Put the speaker wire in the groove on the back of the speaker.


### Notes:

- Place speakers with the tweeter on the outside. Left and right speakers should always be positioned symmetrically.

(Horizontal position)




(Vertical position)

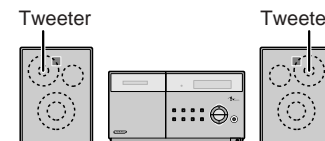


- There are four VESA (\*) screw holes on the back of the main unit and speakers. You can also use commercially available fittings for mounting.
- Be sure to install the product according to the method recommended by the bracket manufacturer.

(Main unit)

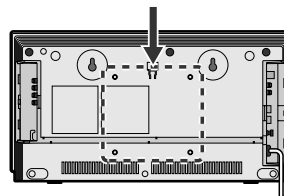


(Speaker)

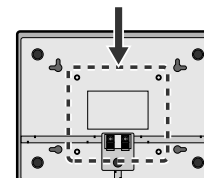

- (\*) VESA (Video Electronics Standards Association) is an organization to promote the standardization of digital imaging device for PCs.

# General control

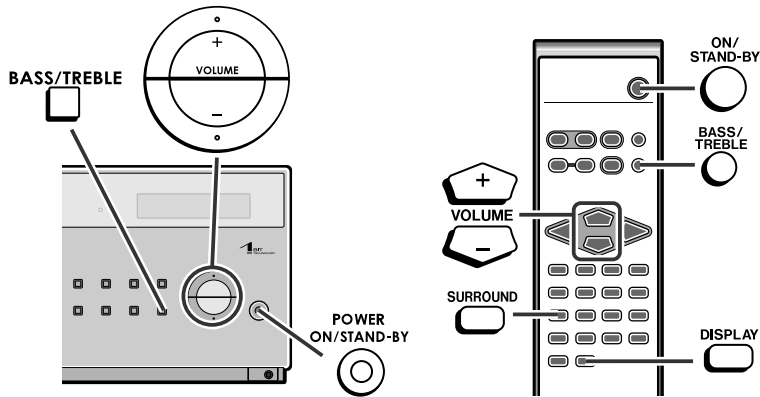

## > To turn the power on

**Press the ON/STAND-BY button to turn the power on.**

If the power does not turn on, check the AC power cord is plugged in properly.

### After use:

Press the ON/STAND-BY button to enter the power stand-by mode.

 
### Note:

Do not turn on the power immediately after entering the power stand-by mode. Wait a while.

## > To change the display brightness (2 levels)


When the power is on, you can switch the display brightness by pressing the DISPLAY button on the remote control.

For example, CD function

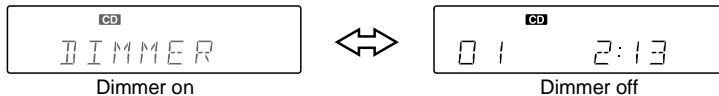


## > Volume control

 Press the VOLUME (+ or -) button to increase or decrease the volume.

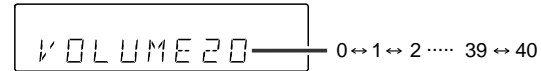


## > Bass control

 - 1 Press the BASS/TREBLE button to select "BASS".
- 2 Within 3 seconds, press the VOLUME (+ or -) button to adjust the bass.

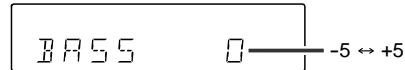

## > Treble control

 
- 1 Press the BASS/TREBLE button to select "TREBLE".
- 2 Within 3 seconds, press the VOLUME (+ or -) button to adjust the treble.

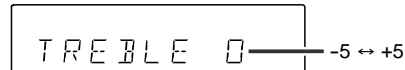

## > Surround

Press the SURROUND button to enjoy music that seems to surround you. "SURROUND" will appear.


To cancel the surround mode, press the SURROUND button again.

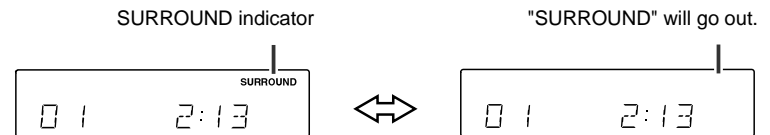



# Setting the clock


By setting the unit to the correct time, you can use it not only as a clock but also for timer playback.

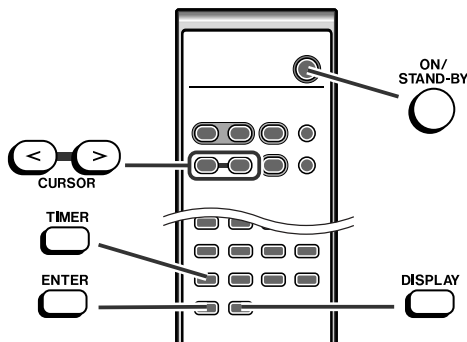

In this example, the clock is set for the 12-hour (AM 12:00) display.


<b>1 Press the ON/STAND-BY button to turn the power on.</b>
<b>2 Press the TIMER button.</b>
<b>3 Within 10 seconds, press the CURSOR (&lt; or &gt;) button to select "CLOCK", and press the ENTER button.</b>
<p>The diagram shows a rectangular display area. On the left, the word 'CLOCK' is displayed. An arrow points to the right, where the display now shows 'AM 12:00'.</p>
<b>4 Press the CURSOR (&lt; or &gt;) button to select 12-hour or 24-hour display and then press the ENTER button.</b>
<p>The diagram shows a rectangular display area showing 'AM 12:00'.</p>
"AM 12:00" → The 12-hour display will appear. (AM 12:00 - PM 11:59) "AM 0:00" → The 12-hour display will appear. (AM 0:00 - PM 11:59) "0:00" → The 24-hour display will appear. (0:00 - 23:59)
Note that this can only be set when the unit is first installed or it has been reset. [Refer to "Clearing all the memory (reset)" on page 29 for details.]

**5 Press the CURSOR (< or >) button to adjust the hour and then press the ENTER button.**

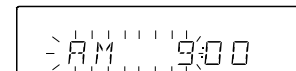 

- Press the CURSOR (< or >) button once to advance the time by 1 hour. Hold it down to advance continuously.
- When the 12-hour display is selected, "AM" will change automatically to "PM".


**6 Press the CURSOR (< or >) button to adjust the minutes and then press the ENTER button.**

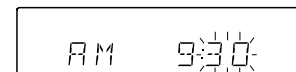 

- Press the CURSOR (< or >) button once to advance the time by 1 minute. Hold it down to advance by 5 minutes.
- The hour will not advance even if minutes advance from "59" to "00".
- The clock begins counting from "0" seconds. (Seconds are not displayed.) The time display will disappear after a few seconds.

**To confirm the time display:**

 [When the unit is in the stand-by mode]  
Press the DISPLAY button on the remote control.  
The time display will appear for about 5 seconds.

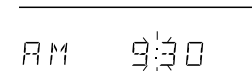

[When the power is on]  
Press the TIMER button.  
Within 10 seconds, press the CURSOR (< or >) button to display the time.  
The time display will appear for about 10 seconds.

**Note:**

The "CLOCK" will appear at the push of the DISPLAY button when the AC power supply is restored after a power failure or unplugging the unit.  
Readjust the clock as follows.

**To readjust the clock:**



Perform "Setting the clock" from the beginning.

**To change the 12-hour or 24-hour display:**

- Clear all the programmed contents. [Refer to "Clearing all the memory (reset)" on page 29 for details.]
- Perform "Setting the clock" from the beginning.

# Listening to a CD

This system can also play audio CD-R and CD-RW discs, but cannot record. Some audio CD-R and CD-RW discs may not be playable due to the state of disc or the device that was used for recording.

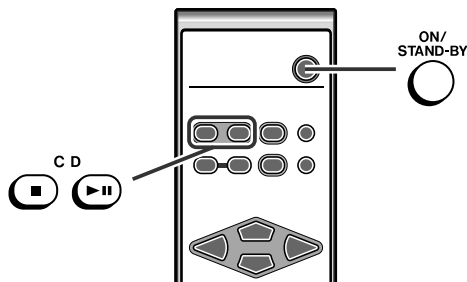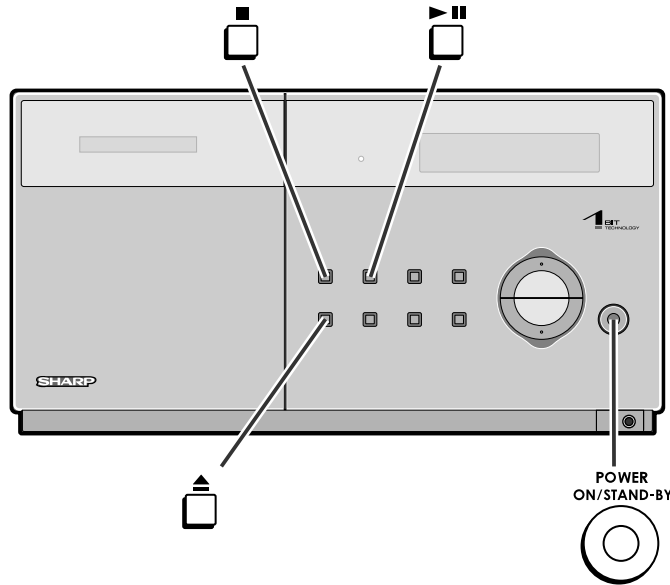


**1 Press the ON/STAND-BY button to turn the power on.**

**2 Press the ■ button.**

**3 Press the ▲ button to open the CD cover.**

**4 Place a CD on the spindle.**

- Face the label side toward you.
- Place a CD on the spindle properly to avoid scratches.

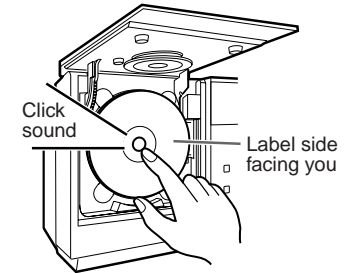

**5 Press the ▲ button to close the CD cover.**

**6 Press the ►|| button to start playback.**

When the last track on the disc has finished playing, the CD player will automatically stop.

 
### To interrupt playback:

Press the ►|| button.

To resume playback from the same point, press the ►|| button again.

### To stop playback:

Press the ■ button.

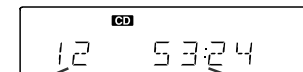

Total number of tracks

Total playing time


### After use:

Press the ON/STAND-BY button to enter the power stand-by mode.

# Advanced CD Playback

## > To remove the CD

- 1 While in the stop mode, press the  $\blacktriangle$  button.
- 2 Press the CD eject button and remove the CD.
- 3 Press the  $\blacktriangle$  button to close the CD cover.

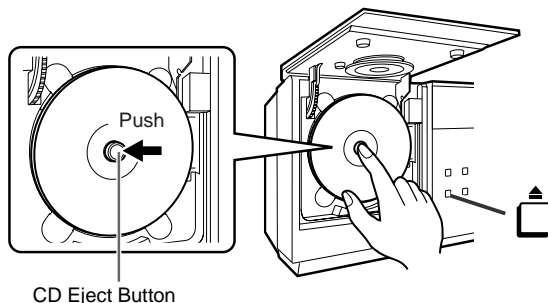

CD Eject Button

### Caution:

- Do not open or close the CD cover manually. It may cause malfunctions to the unit.
- Be careful not to jam your fingers in the CD cover.
- Do not play discs with special shapes (heart- or octagon-shaped). It may cause malfunctions.
- If the power fails while the CD cover is open, wait until the power is restored.
- Keep foreign objects out of the CD compartment.
- When the unit is not being used, be sure to close the CD cover. If it is left open, the lens may be covered with dust and the unit may not operate properly.
- When the unit enters the stand-by mode, the opened CD cover will close automatically.

### Notes:

- Subjecting the unit to shock or vibration may cause mistracking or skipping.
- **Playing certain CD at a high volume may cause mistracking. In this case, listen at a lower volume.**
- If the recorded side of the CD is touched or becomes dirty, refer to "Care of compact discs" (page 30) and clean it.
- If a disc is damaged or dirty, the sound may skip.
- If an error message is displayed during CD operation, see "Error messages" on page 30.
- If TV or radio interference occurs during CD operation, move the unit away from the TV or radio.

## > To locate the beginning of a track

### To move to the beginning of the next track:

Press the  $\blacktriangleright|$  button during playback.

- You can skip to any track by pressing the  $\blacktriangleright|$  button repeatedly until the desired track number appears.

### To restart the track being played:

Press the  $|<<$  button during playback.

- You can skip to any track by pressing the  $|<<$  button repeatedly until the desired track number appears.

## > To locate the desired portion

### For audible fast forward:

Press and hold down the  $\blacktriangleright|$  button during playback.

### For audible fast reverse:

Press and hold down the  $|<<$  button during playback.


### Notes:

- Normal playback will resume when the  $|<<$  or  $\blacktriangleright|$  button is released.
- When the end of the last track is reached during fast forward, "END" will appear on the display and CD operation will be paused. When the beginning of the first track is reached during fast reverse, the unit will enter the playback mode.

### To search very quickly:

When fast forward or fast reverse is used while in the pause mode, the playback point will move more quickly than when using audible fast forward or audible fast reverse playback.

- In this mode, no sound is heard. Therefore, you should refer to the time display.
- When you lift your finger, the unit will re-enter the pause mode.

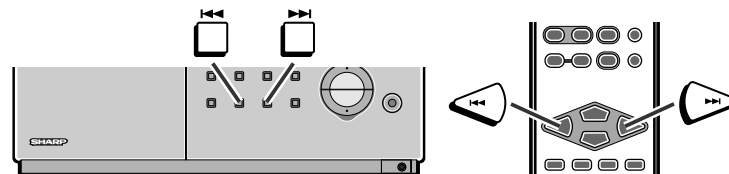

# Advanced CD Playback (continued)

## > Direct play

By using the direct buttons, the desired tracks can be played.

### Press the direct buttons to select the desired track.

The direct buttons will allow you to select and play any track from 1 to 10 automatically.

### To select a track between 11 and 99:

Press the "> 10" button followed by the two digits of the track number.

### For example, to choose 28

- 1 Press the "> 10" button.
- 2 Press the "2" button.
- 3 Press the "8" button.

### Notes:

 
- After pressing the "> 10" button, the two digits must be entered within 5 seconds of each other.
- It is not possible to enter a track number higher than the total tracks of the CD.
- You cannot select a track with the direct buttons while in random or program play.

## > Switching the time display


Each time the TIME button on the remote control is pressed during playback, the display will change.



The elapsed playing time for the current track will be displayed.

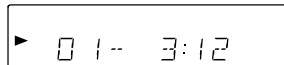


The remaining playing time for the current track will be displayed.

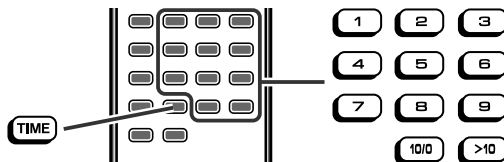

## > Repeat or random play

You can select one of three playback modes; "Repeat play", "Random play" and "Normal play".

- 1 When in the CD mode, press the **PLAY MODE** button repeatedly to select the playback mode.

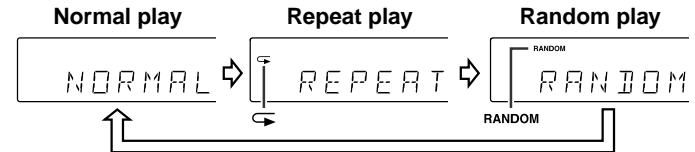

- 2 Press the **▶||** button to start playback.

### To repeat a programmed sequence:


Perform steps 1 - 5 in the "Programmed play" section on page 21 and then select repeat playback.

### Notes:

- During "Programmed play" operation, the random mode cannot be selected by the **PLAY MODE** button.
- After using repeat play, be sure to press the **■** button. Otherwise, the disc will play continuously.
- The random play will stop automatically when all tracks are played once. (The same track will not be played back twice.)
- In random play, the CD player will select and play tracks automatically. (You cannot select the order of the tracks.)



### To cancel repeat or random play:

Press the **PLAY MODE** button repeatedly to select the normal play mode.

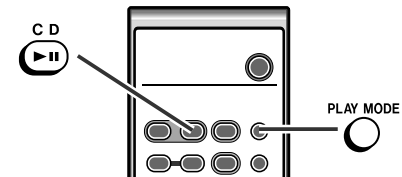




# Listening to the radio

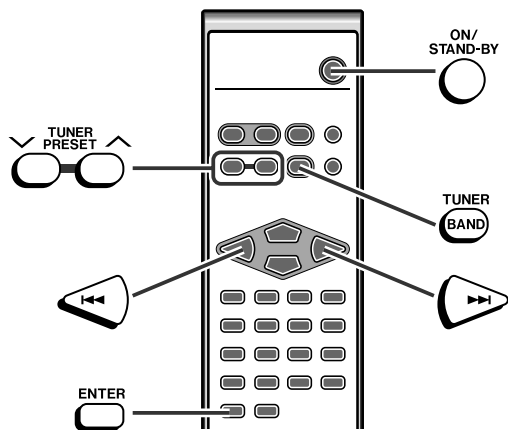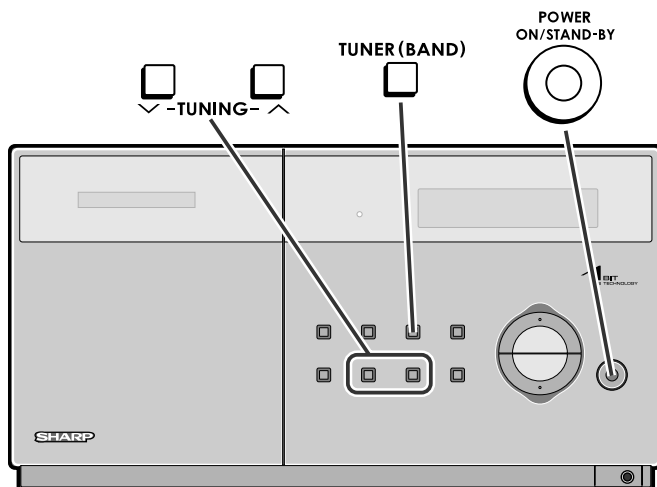

## > Manual or Auto tuning

 - 1 Press the ON/STAND-BY button to turn the power on.
- 2 Press the TUNER (BAND) button repeatedly to select the desired frequency band.

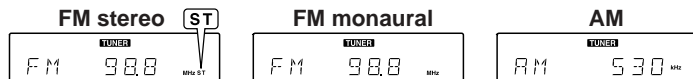

- 3 Press the TUNING (✓ or ^) button on the front of the unit to tune in to the desired station.

You can also tune in to the desired station by pressing the ◀◀ or ▶▶ button on the remote control.

### Manual tuning:

Press the TUNING button as many times as required to tune in to the desired station.

### Auto tuning:

When the TUNING button is pressed for 0.5 seconds or more, scanning will start automatically and the tuner will stop at the first receivable broadcast station.

### Notes:

- When radio interference occurs, auto scan tuning may stop automatically at that point.
- Auto scan tuning will skip weak signal stations.
- To stop the auto tuning, press the TUNING button again.

### To receive an FM stereo transmission:

Press the TUNER (BAND) button to display the "ST" indicator.

"ST" will appear when an FM broadcast is in stereo.



 
If the FM reception is weak, press the TUNER (BAND) button to extinguish the "ST" indicator. The reception changes to monaural, and the sound becomes clearer.


### After use:

Press the ON/STAND-BY button to enter the power stand-by mode.

## > Memorizing a station

You can store 40 AM and FM stations in memory and recall them at the push of a button. (Preset tuning)

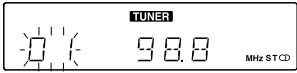 - 1 Perform steps 1 - 3 in "Manual or Auto tuning" on page 22.**
- 2 Press the ENTER button to enter the preset tuning saving mode.**
- 3 Within 5 seconds, press the TUNER PRESET (∨ or ∧) button to select the preset channel number.**

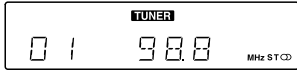
Store the stations in memory, in order, starting with preset channel 1.
- 4 Within 5 seconds, press the ENTER button to store that station in memory.**


If the preset number indicator goes out before the station is memorized, repeat the operation from step 2.
- 5 Repeat steps 1 - 4 to set other stations, or to change a preset station.**

When another station is stored in a preset memory number, the preset station is replaced.

### Note:

The backup function protects the memorized stations for a few hours should there be a power failure or if the AC power cord is disconnected.

## > To recall a memorized station

This may be operated only with the remote control.

### To select a preset station with the TUNER PRESET buttons:

Press the TUNER PRESET (∨ or ∧) button to select the desired station.



### To select a preset station with the direct buttons:

**Station 1 - 10:** press the corresponding number ("1" - "10/0").

**Station 11 - 40:** press the "> 10" button followed by the two-digit number.

### For example, to choose 28

 - 1 Press the "> 10" button.
- 2 Press the "2" button.
- 3 Press the "8" button.

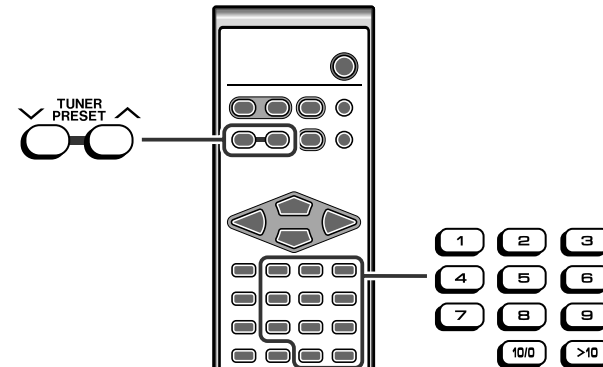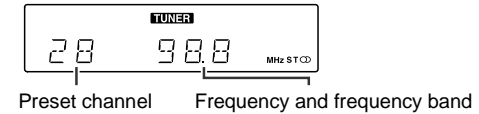

# Timer and sleep operation

This may be operated only with the remote control.

## Timer playback:


The unit turns on and plays the desired source (CD, tuner) at the preset time.

## Sleep operation:

The radio and compact disc player can be turned off automatically.

### Before setting timer:

- 1 Set the unit to the correct time (page 17).  
If it is not set, you cannot use the timer function.
- 2 Prepare the sound source for playback.
- 3 Store radio stations (page 23).

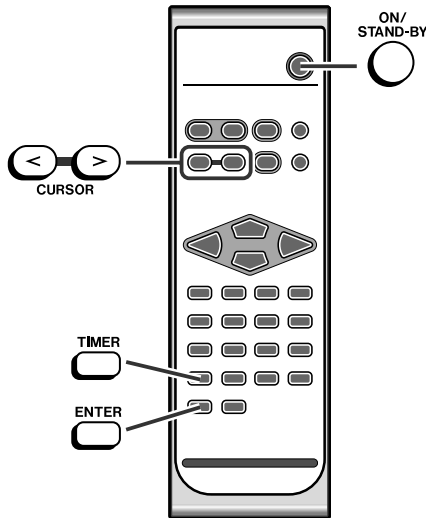

## > Timer playback

- |   |                                      |
|---|--------------------------------------|
| <b>1</b> Press the ON/STAND-BY button to turn the power on.   |                                      |
| <b>2</b> Press the TIMER button.  | STANDBY                              |
| <b>3</b> Within 10 seconds, press the CURSOR (< or >) button to select "TIMER".   | TIMER                                |
| <b>4</b> Within 10 seconds, press the ENTER button.   | ON<br>↓<br>-AM 7:00                  |
| <b>5</b> Press the CURSOR (< or >) button to specify the hour to start, and press the ENTER button.   | -AM 7:00                             |
| <b>6</b> Press the CURSOR (< or >) button to specify the minutes, and press the ENTER button.<br><br>Unless the timer setting is changed, the ending time will automatically be set for one hour after the starting time. | AM 7:30<br>↓<br>OFF<br>↓<br>-AM 8:30 |
| <b>7</b> Press the CURSOR (< or >) button to specify the hour to stop, and press the ENTER button.  | -AM 7:30                             |
| <b>8</b> Press the CURSOR (< or >) button to specify the minutes, and press the ENTER button.   | AM 7:45                              |



**9 Press the CURSOR (< or >) button to select the desired function (CD, TUNER or AUX).**

**10 Press the ENTER button.**

When you select the tuner, select a station by pressing the CURSOR (< or >) button, and then press the ENTER button.

If a station has not been programmed, "NO P-SET" will appear.

**11 Press the CURSOR (< or >) button to adjust the volume.**

Be careful not to turn the volume up too high.

**12 Press the ENTER button.**

Settings are displayed in order and the unit will enter the timer stand-by mode.



#### To check the timer setting:

- 1 While in the timer playback stand-by mode, press the TIMER button.
- 2 Within 10 seconds, press the CURSOR (< or >) button to select "CALL", and press the ENTER button.



 
The unit returns to the timer playback stand-by mode after the setting contents are displayed in order.

#### When the start time is reached:

Playback starts automatically and the volume increases gradually.

The timer playback indicator flashes.

Timer Play Indicator

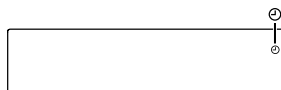

#### When the finish time is reached:

The unit is set to the power stand-by mode automatically.

#### Reusing the memorized timer setting:

The timer setting will be memorized once it is entered. To reuse the same setting, perform the following operations.

- 1 Turn the power on and press the TIMER button.  
Set the unit to the correct time if "STANDBY" does not appear.
- 2 Within 10 seconds, press the ENTER button.  
After the setting contents are displayed in order, the unit is set to the timer playback stand-by mode.

#### Changing the timer setting:

Turn the power on, and repeat the operation from step 2 in "Timer playback" (see pages 24 - 25).

#### Canceling the timer playback:

Timer playback is canceled by turning the power on while in the timer playback stand-by mode. The same operation can be performed in the following procedure without turning the power on.

- 1 Press the TIMER button.  
"CANCEL" will appear.



- 2 Within 10 seconds, press the ENTER button.  
Timer playback will be canceled (the contents of the setting will not be canceled).

#### Caution:

The contents of the setting will be erased if the unit is unplugged or a power failure occurs. In such cases, set the timer again.

#### Notes:


- The timer playback is possible with a CD even if the repeat, random, or programmed playback is set.
- When you perform timer playback using other equipment connected to the AUX IN jacks, select "AUX" in step 9. This unit will turn on or enter the stand-by mode automatically (the connected equipment will not turn on or off).

# Timer and sleep operation (continued)

## > Sleep operation


The radio and CD can be turned off automatically.

<b>1</b> Play back the desired sound source.	
<b>2</b> Press the <b>TIMER</b> button.	
<b>3</b> Within 10 seconds, press the <b>CURSOR</b> (< or >) button to select "SLEEP".	
<b>4</b> Within 10 seconds, press the <b>ENTER</b> button.	
<b>5</b> Press the <b>CURSOR</b> (< or >) button to specify the sleep time.	 (Maximum: 2 hours - Minimum: 1 minute)
<b>6</b> Press the <b>ENTER</b> button.	
<b>7</b> Your system will enter the power stand-by mode automatically after the preset time has elapsed. The volume will be turned down 1 minute before the sleep operation finishes.	

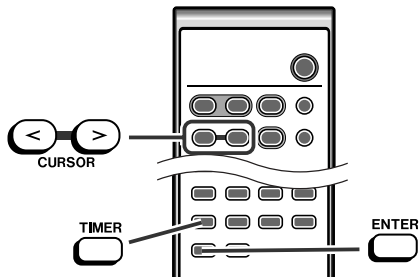

## To confirm the remaining sleep time:

 - 1 Press the **TIMER** button while the sleep timer is set.
- 2 Within 10 seconds, press the **CURSOR** (< or >) button to select "SLEEP".

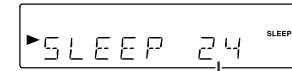


Remaining sleep time

- The remaining sleep time is displayed for about 10 seconds.
- You can change the remaining sleep time while it is displayed by pressing the **ENTER** button (steps 5 - 6).

## To cancel the sleep operation:

 The sleep timer is canceled when the unit enters the power stand-by mode. To cancel only the sleep timer without setting the unit to the power stand-by mode, proceed as follows.


- 1 Press the **TIMER** button while the sleep timer is set.
- 2 Within 10 seconds, press the **CURSOR** (< or >) button to select "SLEEPOFF".
- 3 Within 10 seconds, press the **ENTER** button.

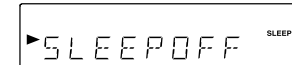



## > To use timer and sleep operation together

Example: You can fall asleep to the radio and wake up with the sound from a CD.

 - 1 Set the sleep time (steps 1 - 6, page 26).

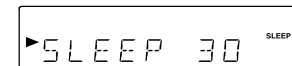


 - 2 Set the timer playback (steps 1 - 12, pages 24 - 25).

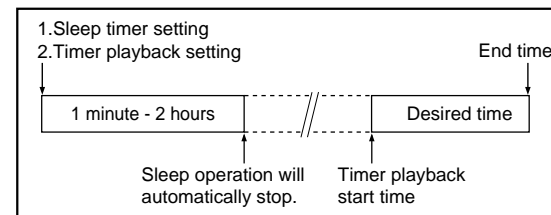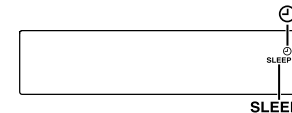

# Enhancing your system

- The connection cord is not included. Purchase a commercially available cord as shown below.
- Before connecting external units, set this unit to the power stand-by mode and turn off the power to the external units.

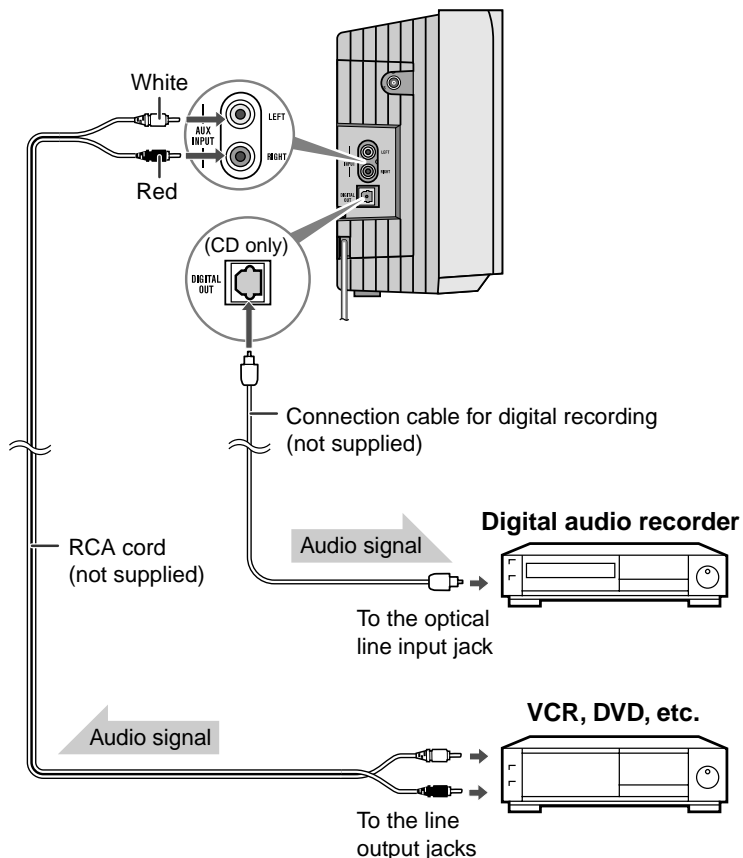

## > Listening to the playback sounds from VCR, DVD, etc.

- 1 Use a RCA cord to connect the VCR, DVD, etc. to the AUX INPUT terminals. When using video equipment, connect the audio output to this unit and the video output to a television.
- 2 Press the ON/STAND-BY button to turn the power on.
- 3 Press the AUX button.
- 4 Play the VCR, DVD, etc.



### Note:

To prevent hum interference, place this unit away from a television.

## > To record CD signals on external digital audio recorders

The digital signal from this unit can be recorded by digital audio recorders, MiniDisc recorders and other devices equipped with an optical digital audio input.


- 1 Open the left side cover and then remove the DIGITAL OUT jack cover.
- 2 Close the left side cover (see page 13).
- 3 Use an optical connection cable for digital recording to connect the unit to the OPTICAL IN jack of digital audio recorders, etc.
- 4 Press the ON/STAND-BY button to turn the power on.
- 5 Put the MiniDisc recorder, etc. in the recording mode.
- 6 Play a CD on this unit.

### Notes:

- When using the optical digital jack, remove the cap first. After using the jack, replace the cap.
- Only CD signals can be output.


## > Headphones

- Before plugging in or unplugging the headphones, reduce the volume.
- Be sure your headphones have a 1/8" (3.5 mm) diameter plug and are between 16 ohms and 50 ohms impedance. The recommended impedance is 32 ohms.
- Plugging in the headphones disconnects the speakers automatically. Adjust the volume using the VOLUME buttons.

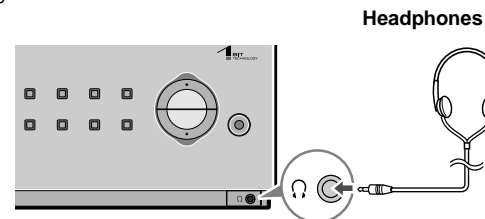

## > Using other subwoofer

For a greater emphasis of bass, a commercially available subwoofer with a built-in amplifier, can be connected to the unit using the SUBWOOFER PRE OUT jack.

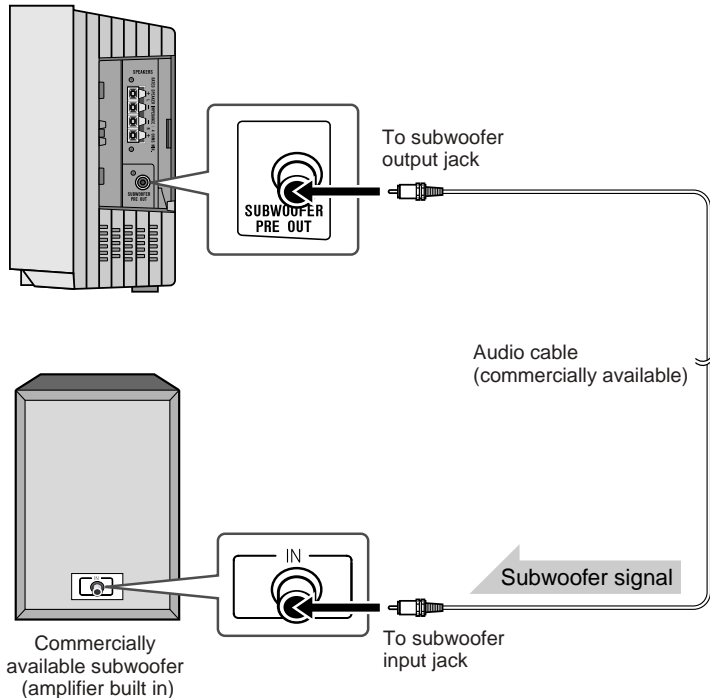

### Note:

No sound is heard from the speaker in which an amplifier is not built in.

# Troubleshooting chart

Many potential problems can be resolved by the owner without calling a service technician.

If something is wrong with this product, check the following before calling your authorized SHARP dealer or service center.

## > General

Symptom	Possible cause
"CLOCK" appears when the clock time is checked.	<ul style="list-style-type: none"> <li>Did a power failure occur? Reset the clock. (Refer to page 17.)</li> </ul>
When a button is pressed, the unit does not respond.	<ul style="list-style-type: none"> <li>Set this unit to the power stand-by mode and then turn it back on.</li> <li>If the unit still malfunctions, reset it. (Refer to page 29.)</li> </ul>
No sound is heard.	<ul style="list-style-type: none"> <li>Is the volume level set to "0"?</li> <li>Are the headphones connected?</li> <li>Are the speaker wires disconnected?</li> </ul>
The picture on the TV screen is distorted.	<ul style="list-style-type: none"> <li>When a radio or TV which uses an indoor antenna is placed near the unit, the picture on the TV screen may be distorted or the radio may not function properly.</li> <li>It is recommended that you use an outdoor antenna.</li> </ul>

## > Tuner

Symptom	Possible cause
The radio makes unusual noises continuously.	<ul style="list-style-type: none"> <li>Is the unit placed near the TV or computer?</li> <li>Is the FM/AM loop antenna placed properly? Move the antenna away from the AC power cord if located near.</li> </ul>
The preset channel cannot be recalled.	<ul style="list-style-type: none"> <li>Did a power failure occur? Preset the channel again.</li> </ul>

## > CD player

Symptom	Possible cause
<ul style="list-style-type: none"> <li>Even though a disc has been loaded, "NO DISC" is displayed.</li> </ul>	<ul style="list-style-type: none"> <li>Is the disc very dirty?</li> <li>Is the unit located near excessive vibrations?</li> <li>Has condensation formed inside the unit?</li> </ul>
<ul style="list-style-type: none"> <li>Playback does not start.</li> </ul>	<ul style="list-style-type: none"> <li>Is the disc loaded with the label side toward you?</li> </ul>
<ul style="list-style-type: none"> <li>Playback stops in the middle or is not performed properly.</li> </ul>	<ul style="list-style-type: none"> <li>Does the disc satisfy the standards?</li> <li>Is the disc distorted or scratched?</li> </ul>
<ul style="list-style-type: none"> <li>Playback sounds are skipped, or stopped in the middle of a track.</li> </ul>	<ul style="list-style-type: none"> <li>Is the unit located near excessive vibrations?</li> <li>Is the disc very dirty?</li> <li>Has condensation formed inside the unit?</li> </ul>

## > Remote control

Symptom	Possible cause
<ul style="list-style-type: none"> <li>The remote control does not operate.</li> </ul>	<ul style="list-style-type: none"> <li>Is the AC power cord of the unit plugged in?</li> <li>Is the battery polarity correct?</li> <li>Are the batteries dead?</li> <li>Is the distance or angle incorrect?</li> <li>Does the remote control sensor receive strong light?</li> </ul>

## > Condensation

Sudden temperature changes, storage or operation in an extremely humid environment may cause condensation inside the cabinet (CD pickup, etc.) or on the transmitter on the remote control.

Condensation can cause the unit to malfunction. If this happens, leave the power on with no disc in the unit until normal playback is possible (about 1 hour). Wipe off any condensation on the transmitter with a soft cloth before operating the unit.

## > If trouble occurs

When this product is subjected to strong external interference (mechanical shock, excessive static electricity, abnormal supply voltage due to lightning, etc.) or if it is operated incorrectly, it may malfunction.

### If such a problem occurs, do the following:

 
- Set the unit to the power stand-by mode and turn the power on again.
- If the unit is not restored in the previous operation, unplug and plug in the unit, and then turn the power on.

### Note:

If neither operation above restores the unit, clear all the memory by resetting it.

## > Clearing all the memory (reset)

- Press the ON/STAND-BY button to enter the power stand-by mode.
- While pressing down the ►► button and the VOLUME (-) button, press the ON/STAND-BY button until "RESET" appears. (Can be done only from the unit.)

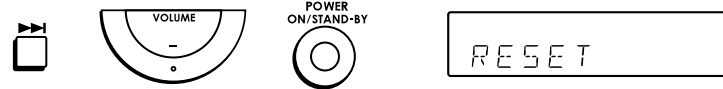


### Caution:

This operation will erase all data stored in memory including clock, timer settings, tuner preset, and CD program.

## > Before transporting the unit


Carrying the unit with a CD inside can cause damage to the unit or the CD. Please open the CD cover to check the CD compartment is empty before transportation. (Refer to page 19.)

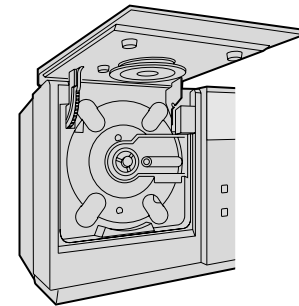

# Maintenance

## > Cleaning the CD pickup lens

Poor performance during CD playback (skipping or jumping) can be caused by a dirty or contaminated CD laser pickup lens, in this case cleaning may be required. Clean the lens gently with a dry cotton swab taking care not to touch the lens with your fingers.

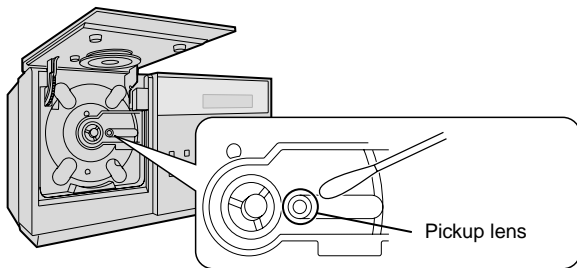

## > Cleaning the cabinet

Periodically wipe the cabinet with a soft cloth and a diluted soap solution, then with a dry cloth.


### Caution:

- Do not use chemicals for cleaning (gasoline, paint thinner, etc.). It may damage the cabinet finish.
- Do not apply oil to the inside of the unit. It may cause malfunctions.

## > Care of compact discs

Compact discs are fairly resistant to damage, however mistracking can occur due to an accumulation of dirt on the disc surface. Follow the guidelines below for maximum enjoyment from your CD collection and player.

- Do not write on either side of the disc, particularly the non-label side from which signals are read. Do not mark this surface.
- Keep your discs away from direct sunlight, heat, and excessive moisture.
- Always hold the CDs by the edges. Fingerprints, dirt, or water on the CDs can cause noise or mistracking. If a CD is dirty or does not play properly, clean it with a soft, dry cloth, wiping straight out from the center, along the radius.

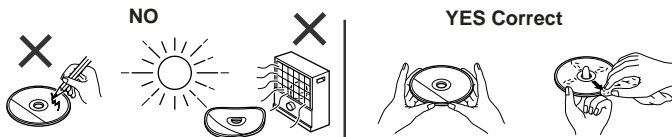

# Error messages

Error messages	Meaning	Remedy
<b>NO DISC</b>	<ul style="list-style-type: none"> <li>The disc is damaged.</li> <li>A CD has not been loaded.</li> <li>The CD data cannot be read.</li> </ul>	<ul style="list-style-type: none"> <li>Replace it with another disc.</li> <li>Eensure that the CD is correctly inserted with the label side toward you.</li> <li>Load a CD.</li> <li>Reload the CD.</li> </ul>
<b>FAN LOCK</b>	<ul style="list-style-type: none"> <li>The cooling fan inside the unit does not run due to foreign objects around the fan.</li> </ul>	<ul style="list-style-type: none"> <li>Set this unit to the stand-by mode and remove the foreign objects around the fan.</li> </ul>

# Specifications

As part of our policy of continuous improvement, SHARP reserves the right to make design and specification changes for product improvement without prior notice. The performance specification figures indicated are nominal values of production units. There may be some deviations from these values in individual units.

## > General

<b>Power source</b>	AC 120 V, 60 Hz
<b>Power consumption</b>	67 W
<b>Dimensions</b>	Width: 15" (380 mm) Height: 7-7/8" (200 mm) Depth: 4-3/4" (120 mm)
<b>Weight</b>	8.2 lbs. (3.7 kg)
<b>Output terminals</b>	Speakers: 4 ohms Headphones: 16 - 50 ohms (recommended: 32 ohms) Optical digital output Subwoofer pre-out (audio signal): 200 mV/10 k ohms at 70 Hz
<b>Input terminals</b>	Auxiliary input: 500 mV/47 k ohms

## > Amplifier

<b>Amplification system</b>	64fs 1-bit switching (Remarks: fs = 44.1 kHz)
<b>Power output</b>	80 watts minimum RMS per channel into 4 ohms from 40 Hz to 20 kHz, 2 % total harmonic distortion
<b>A/D noise shaping</b>	7th-order $\Delta \Sigma$ (delta - sigma) modulation

## > CD player

<b>Type</b>	1-disc vertical type compact disc player
<b>Signal readout</b>	Non-contact, 3-beam semiconductor laser pickup
<b>D/A converter</b>	24-bit/96 k D/A converter
<b>Frequency response</b>	20 - 20,000 Hz
<b>Dynamic range</b>	101 dB (1 kHz)

## > Tuner

<b>Frequency range</b>	FM: 87.5 - 108 MHz AM: 530 - 1.720 kHz
------------------------	---

## > Speaker

<b>Type</b>	2-way type speaker system 13/16" (2 cm) Tweeter 4-3/4" (12 cm) Woofer
<b>Maximum input power</b>	160 W
<b>Rated input power</b>	80 W
<b>Impedance</b>	4 ohms
<b>Dimensions</b>	Width: 10-11/16" (270 mm) Height: 7-7/8" (200 mm) Depth: 4-15/16" (124 mm)
<b>Weight</b>	5.1 lbs. (2.3 kg)/each

## CONSUMER LIMITED WARRANTY

SHARP ELECTRONICS CORPORATION warrants to the first consumer purchaser that this Sharp brand product (the "Product"), when shipped in its original container, will be free from defective workmanship and materials, and agrees that it will, at its option, either repair the defect or replace the defective Product or part thereof with a new or remanufactured equivalent at no charge to the purchaser for parts or labor for the period(s) set forth below.

This warranty does not apply to any appearance items of the Product nor to the additional excluded item(s) set forth below nor to any Product the exterior of which has been damaged or defaced, which has been subjected to improper voltage or other misuse, abnormal service or handling, or which has been altered or modified in design or construction.

In order to enforce the rights under this limited warranty, the purchaser should follow the steps set forth below and provide proof of purchase to the servicer.

The limited warranty described herein is in addition to whatever implied warranties may be granted to purchasers by law. ALL IMPLIED WARRANTIES INCLUDING THE WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE ARE LIMITED TO THE PERIOD(S) FROM THE DATE OF PURCHASE SET FORTH BELOW. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

Neither the sales personnel of the seller nor any other person is authorized to make any warranties other than those described herein, or to extend the duration of any warranties beyond the time period described herein on behalf of Sharp.

The warranties described herein shall be the sole and exclusive warranties granted by Sharp and shall be the sole and exclusive remedy available to the purchaser. Correction of defects, in the manner and for the period of time described herein, shall constitute complete fulfillment of all liabilities and responsibilities of Sharp to the purchaser with respect to the Product, and shall constitute full satisfaction of all claims, whether based on contract, negligence, strict liability or otherwise. In no event shall Sharp be liable, or in any way responsible, for any damages or defects in the Product which were caused by repairs or attempted repairs performed by anyone other than an authorized servicer. Nor shall Sharp be liable or in any way responsible for any incidental or consequential economic or property damage. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS. YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.

### **Model Specific Section**

#### **Your Product Model Number & Description:**

**SD-EX220 1-Bit Digital Audio System**

#### **Warranty Period for this Product:**

(Be sure to have this information available when you need service for your Product.)

One (1) year parts and labor from the date of purchase.

#### **Additional Item(s) Excluded from Warranty Coverage (if any):**

Non-functional accessories, supplies, and consumable items.

#### **Where to Obtain Service:**

At a Sharp Authorized Servicer located in the United States.

To find a location of the nearest Sharp Authorized Servicer, call Sharp toll free at 1-800-BE-SHARP.

#### **What to do to Obtain Service:**

Ship prepaid or carry in your Product to a Sharp Authorized Servicer.

Be sure to have **Proof of Purchase** available. If you ship the Product, be sure it is insured and packaged securely.

TO OBTAIN SUPPLY, ACCESSORY OR PRODUCT INFORMATION, CALL **1-800-BE-SHARP**.

# SHARP

**SHARP ELECTRONICS CORPORATION**

Sharp Plaza, Mahwah, New Jersey 07430-2135

**SHARP CORPORATION**

Printed in Malaysia  
Impreso en Malaysia  
TINSE0560AWZZ  
03F R KS ①